 



Инструкция по установке

KR-74

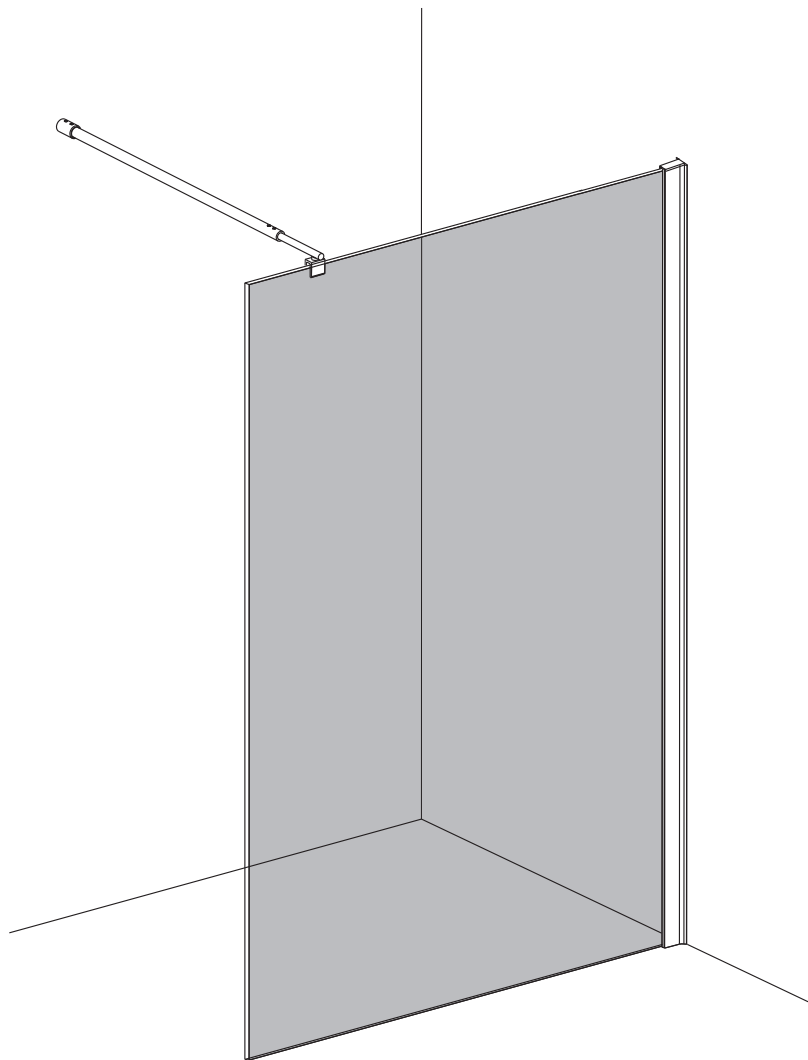


5

 Ø3.2

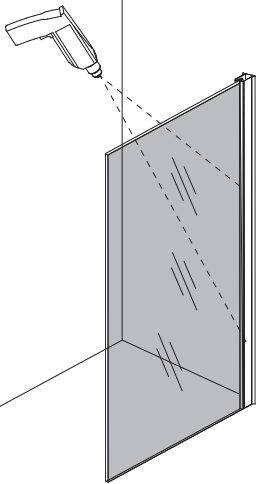


6

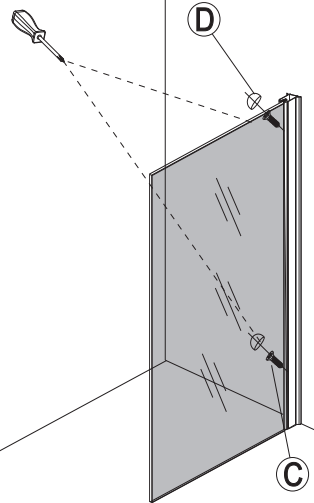 

ST4X10









 7

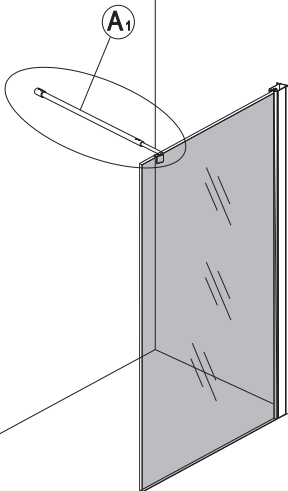


- | | |
|------|---|
| A1.1 | 1 |
| A1.2 | 2 |
| A1.3 | 1 |
| A1.4 | 2 |
| A1.5 | 1 |
| A1.6 | 1 |
| A1.7 | 1 |
| A1.8 | 2 |

      A₁

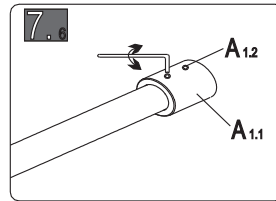
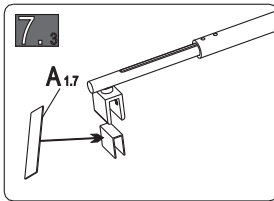
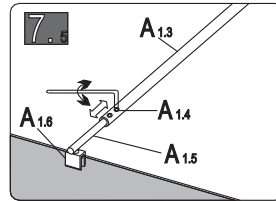
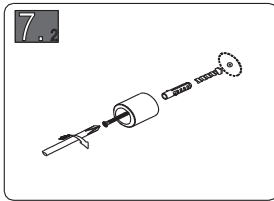
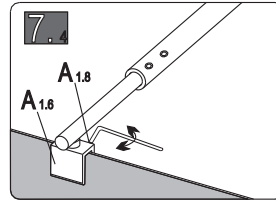
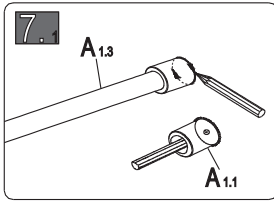


A₂

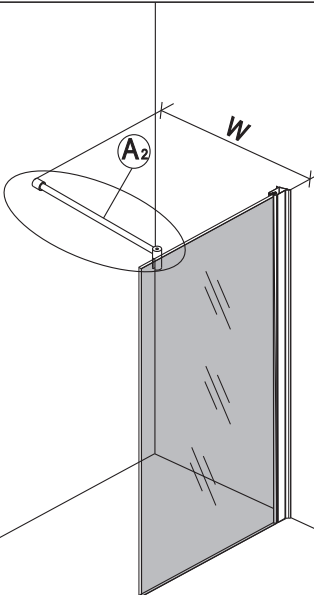 


- | | | |
|------------------|-------|-----|
| A _{2.1} | _____ | X 1 |
| A _{2.2} | _____ | X 2 |
| A _{2.3} | _____ | X 1 |
| A _{2.4} | _____ | X 1 |
| A _{2.5} | _____ | X 1 |
| A _{2.6} | _____ | X 1 |
| A _{2.7} | _____ | X 1 |

      A₂

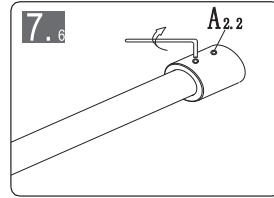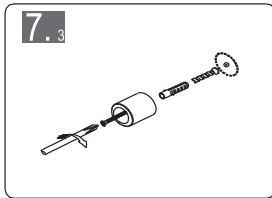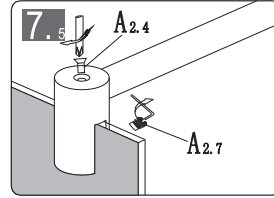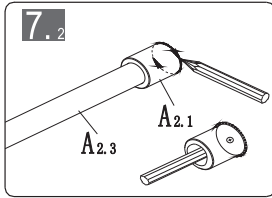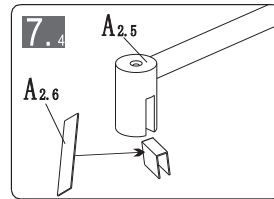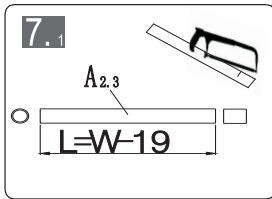

8

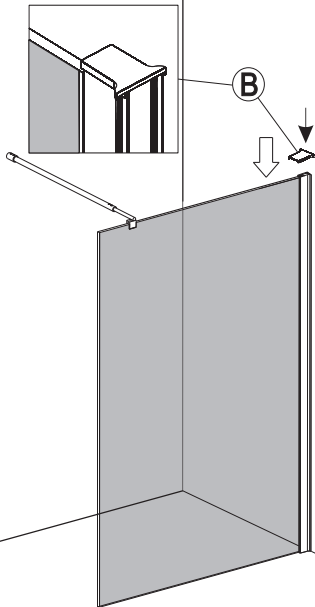 

9

