


Душевой угол


Серия Evo 300

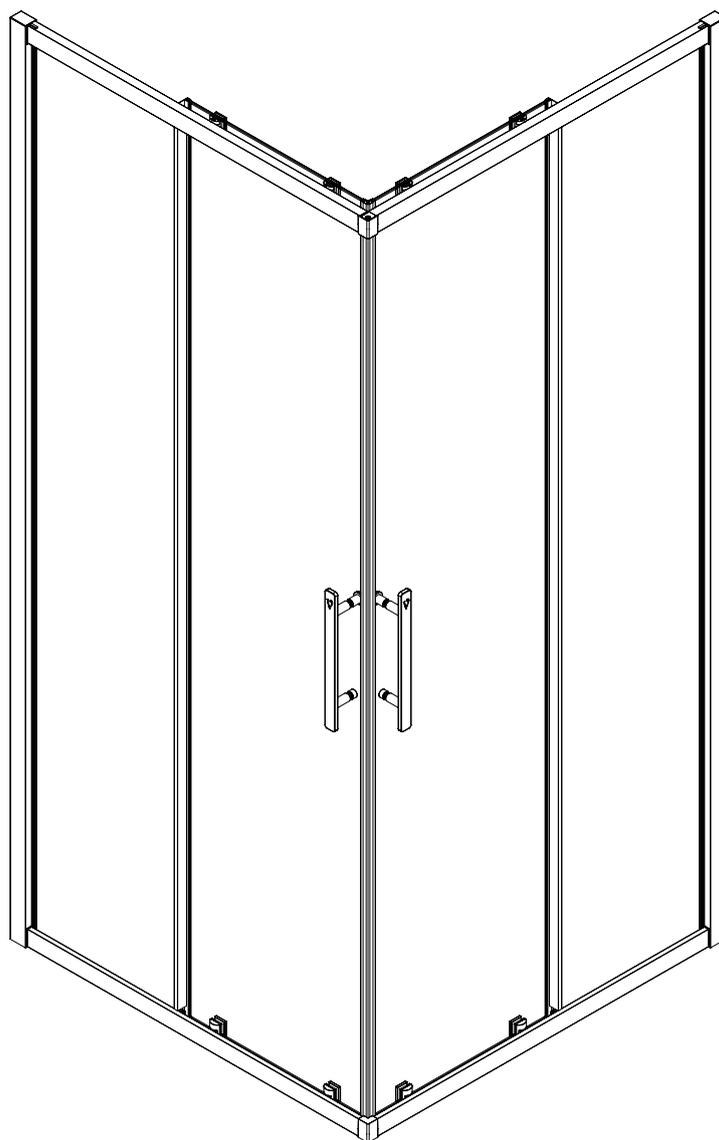

Инструкция по установке

Пожалуйста, прочитайте инструкцию перед установкой


Условный размер (мм)	Монтажные размеры	
	A(мм)	B(мм)
800-800	780-800	780-800
900-900	880-900	880-900
1000-1000	980-1000	980-1000
1000-800	980-1000	780-800
1000-900	980-1000	880-900
1100-800	1080-1100	780-800
1100-900	1080-1100	880-900
1200-800	1180-1200	780-800
1200-900	1180-1200	880-900

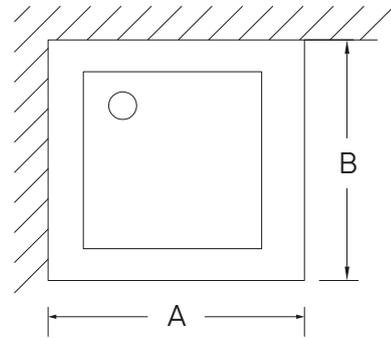

### Необходимые инструменты и оборудование



Карандаш



Сверло




Отвертка



Силикон



Рулетка



Молоток













Уровень





Дрель

Схематическое изображение и перечень деталей






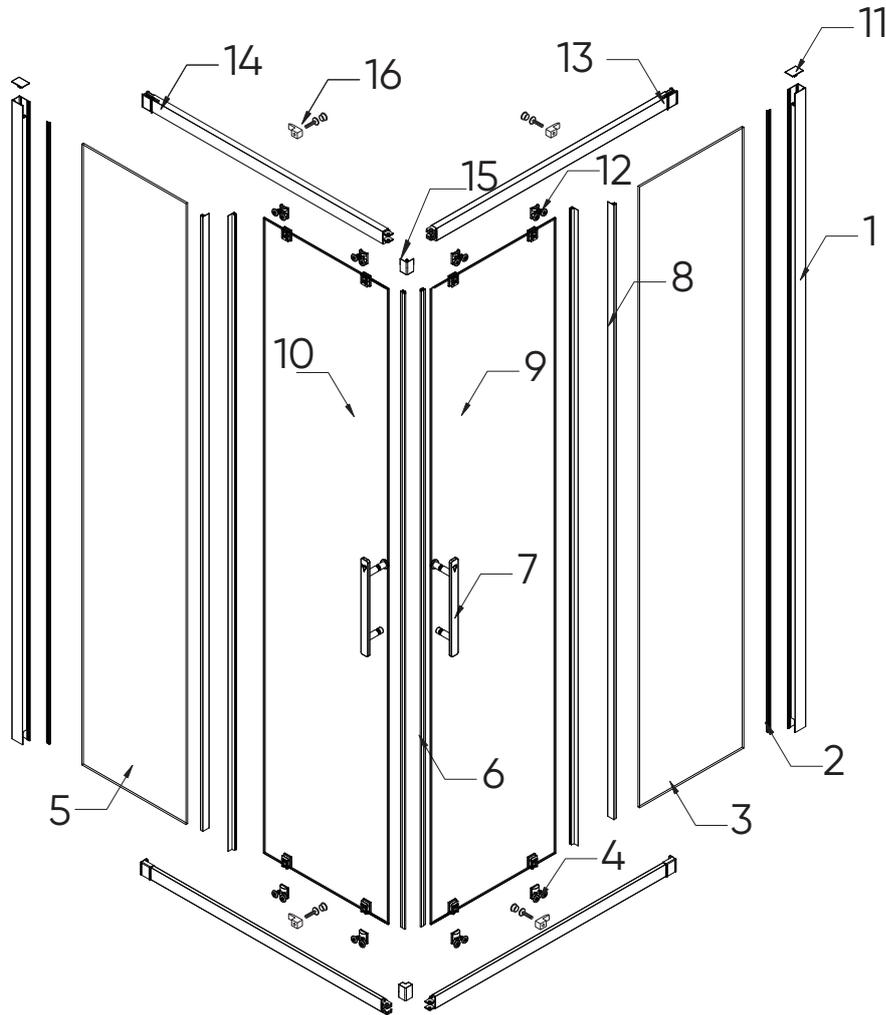


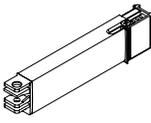1	 x2	2	 x2	3	 x1	4	 x4	5	 x1
6	 x2	7	 x2	8	 x4	9	 x1	10	 x1
11	 (L) (R) x2	12	 x4	13	 x2	14	 x2	15	 x2
16	 x4	17	 x1	18	 ST4x30 x8	19	 6x30 x8	20	 ST4x12 x4








Шаг 1

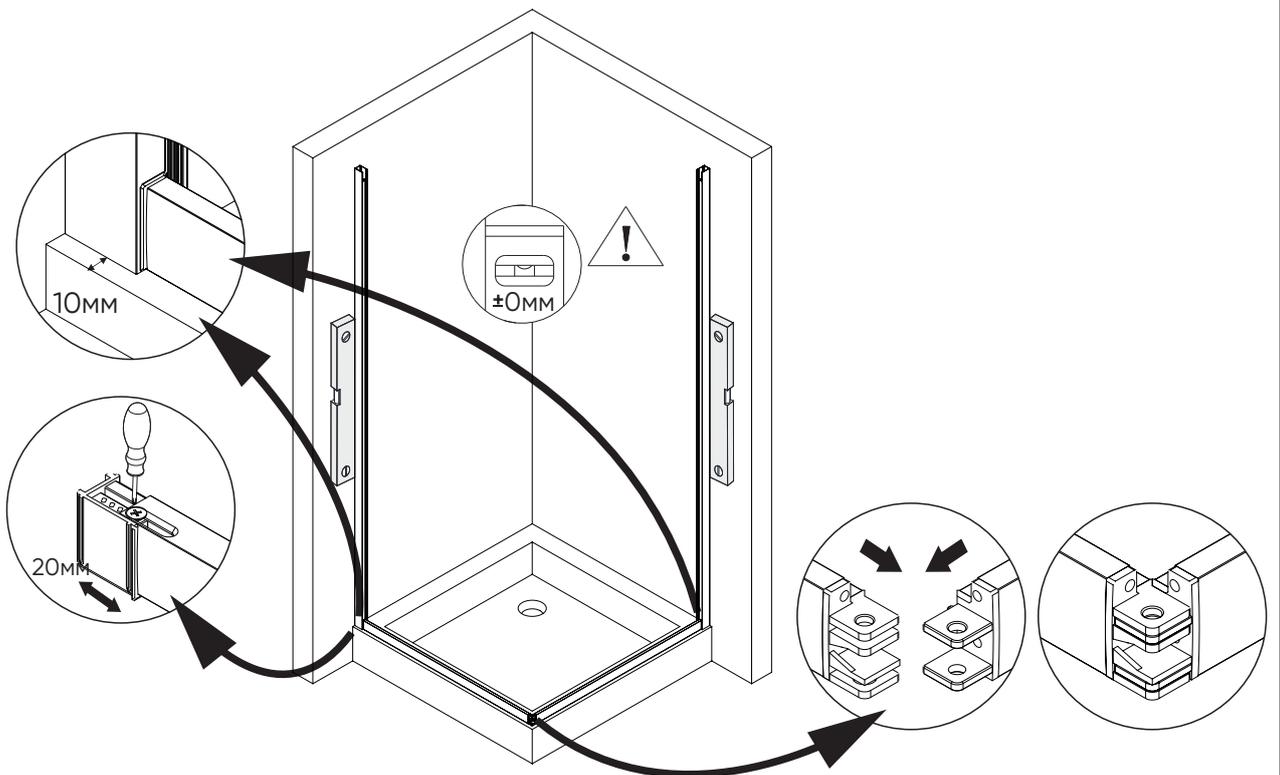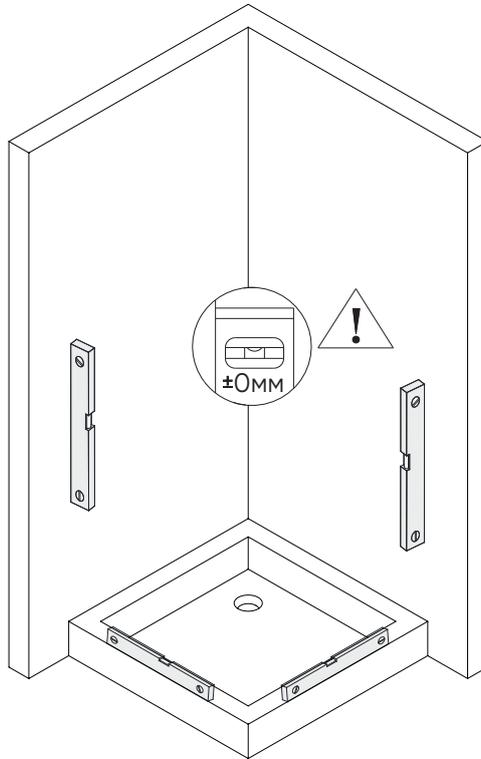


Шаг 2

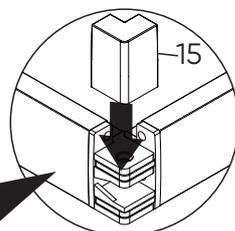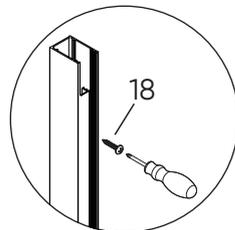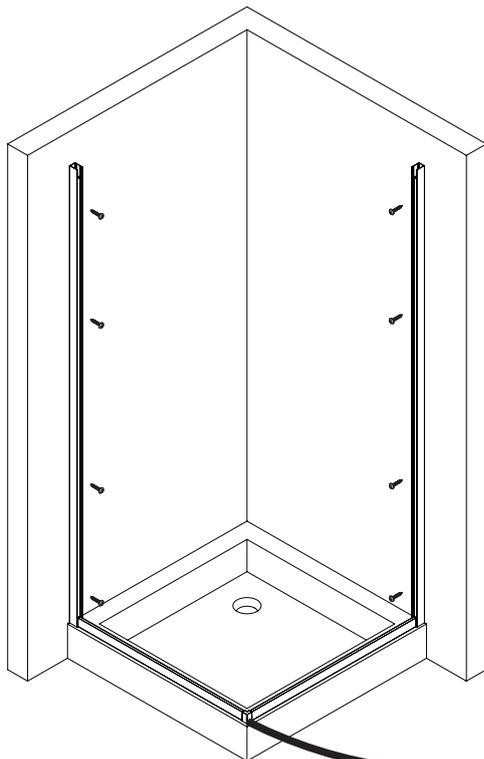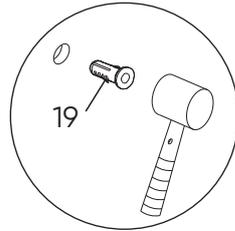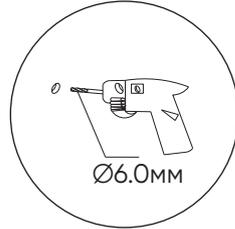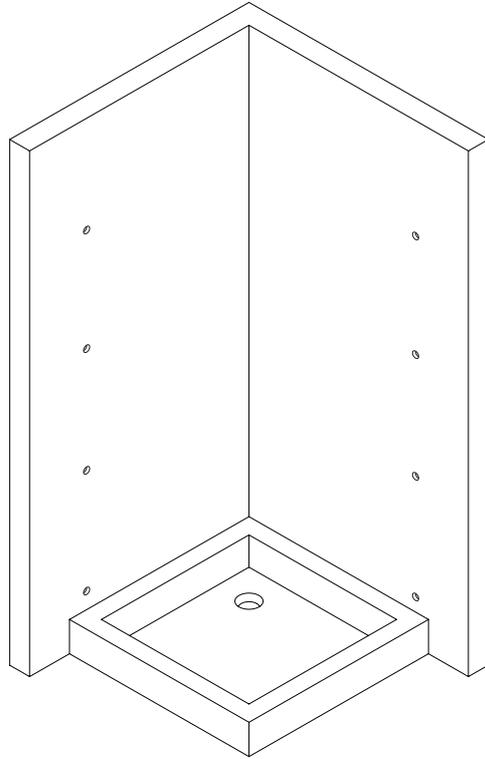


Шаг 3

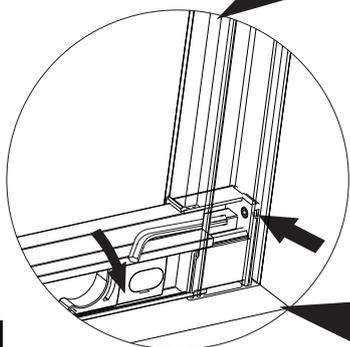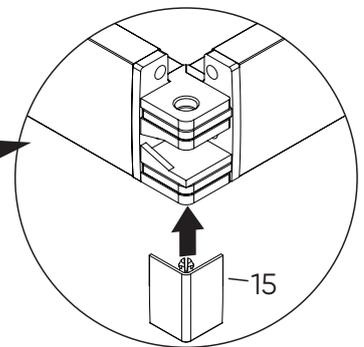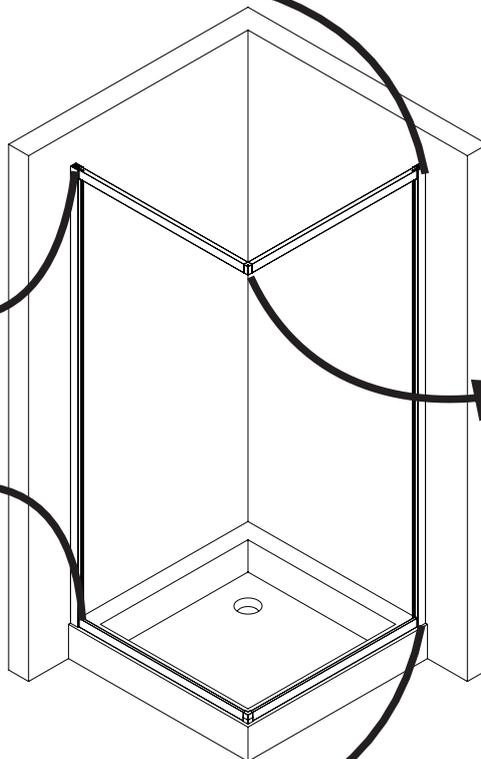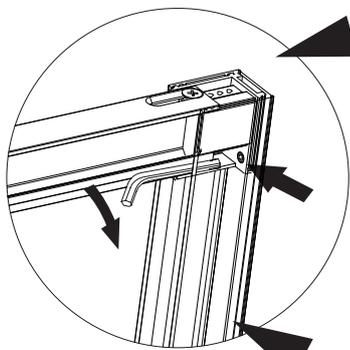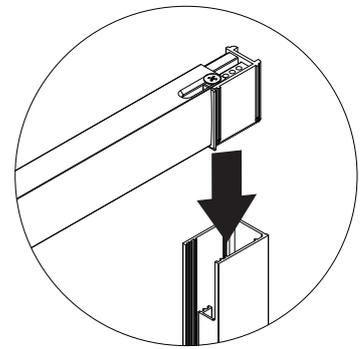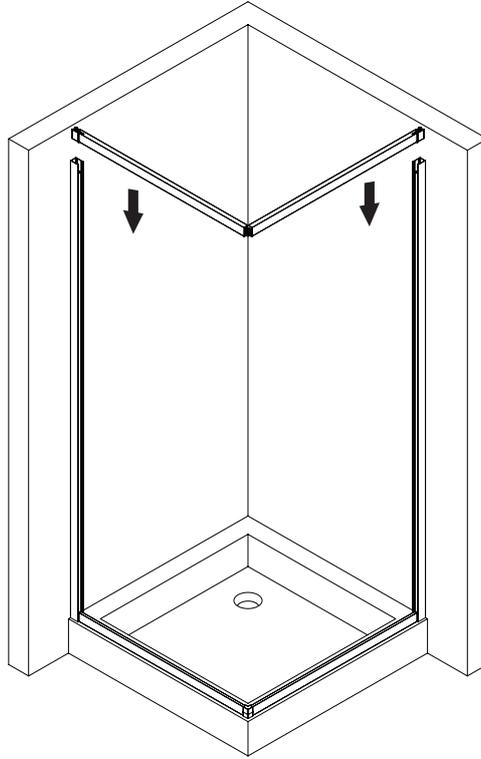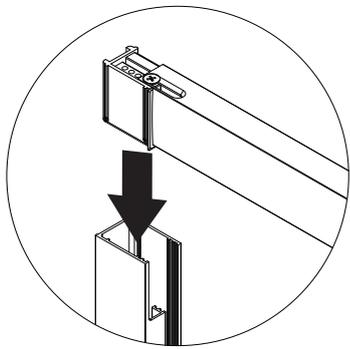






Шаг 4

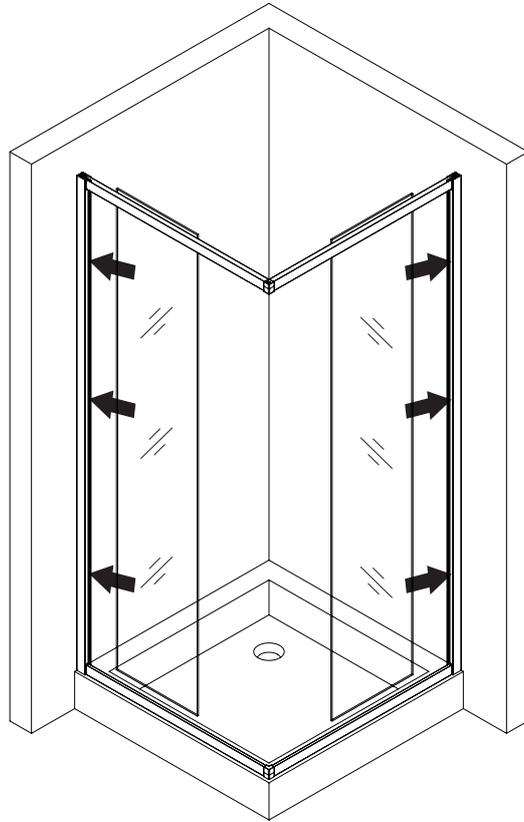






Шаг 5

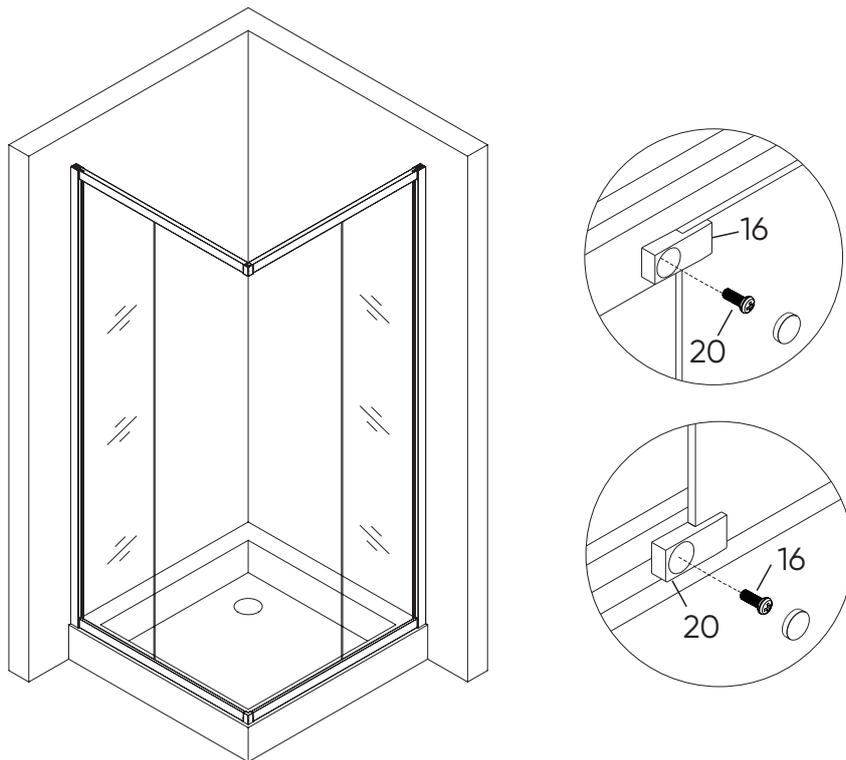


Шаг 6

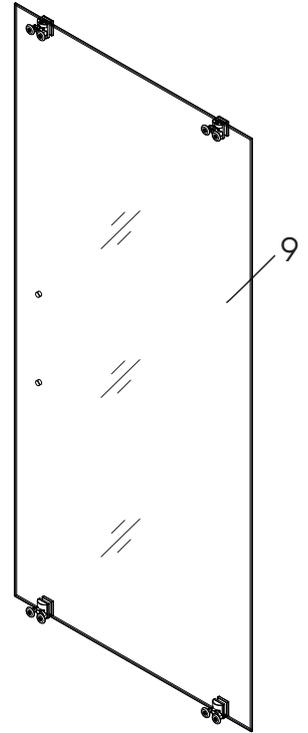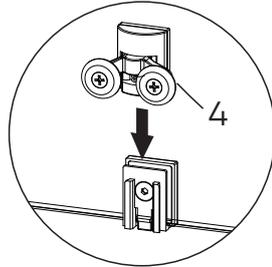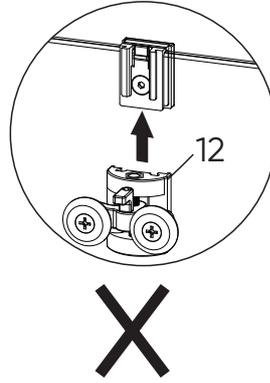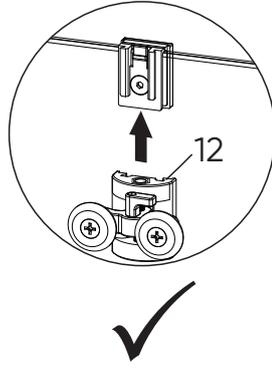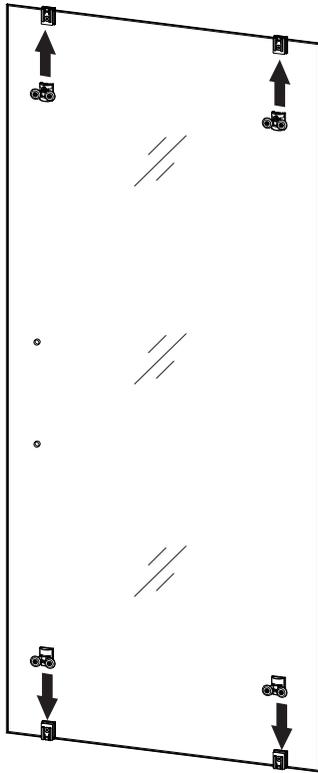


Шаг 7

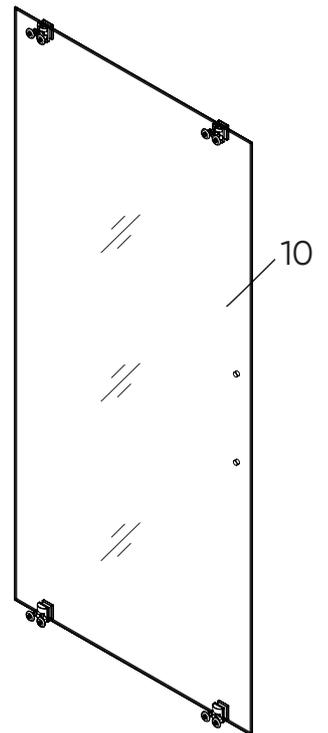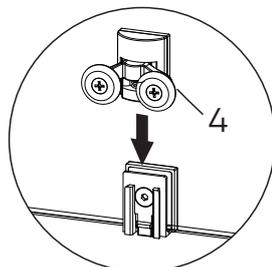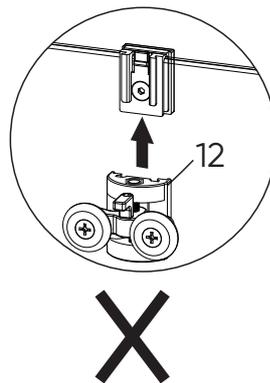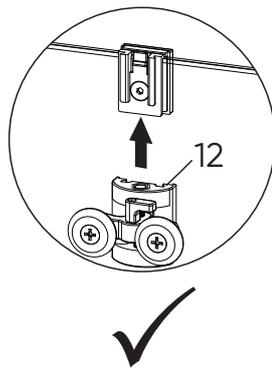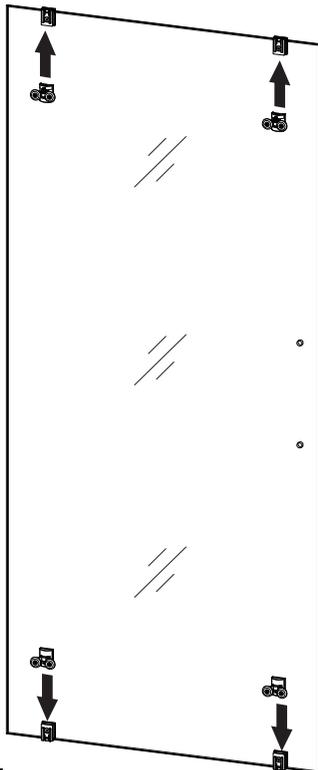








Шаг 8

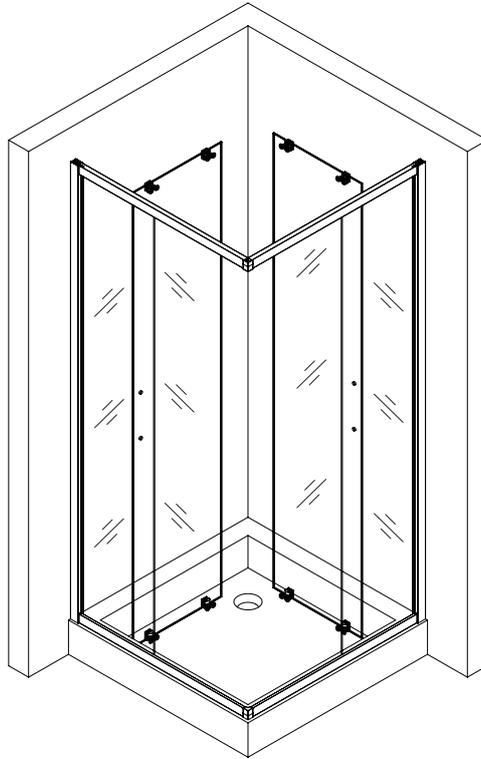









Шаг 9

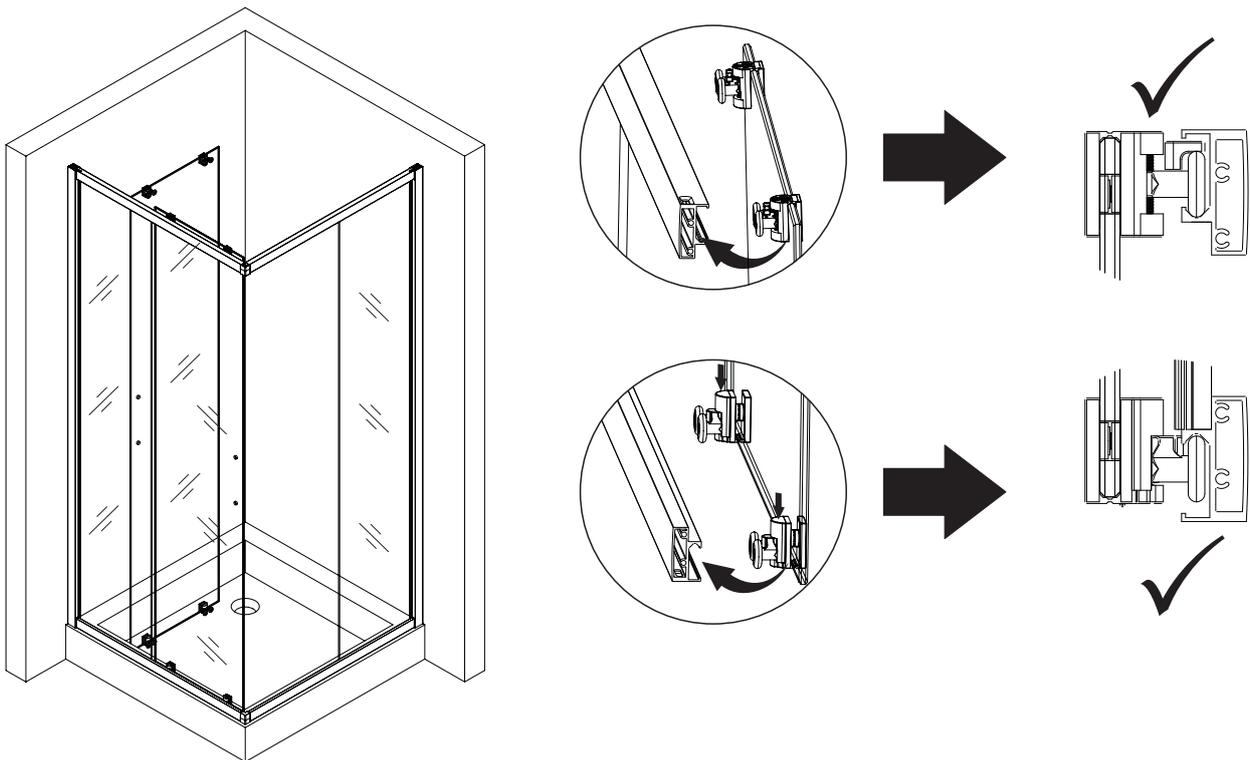





Шаг 10

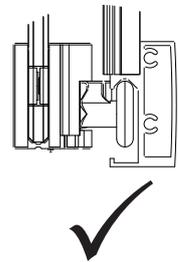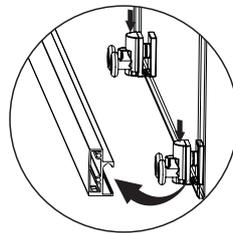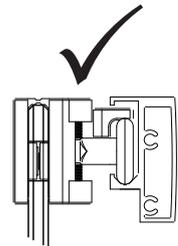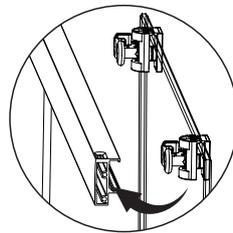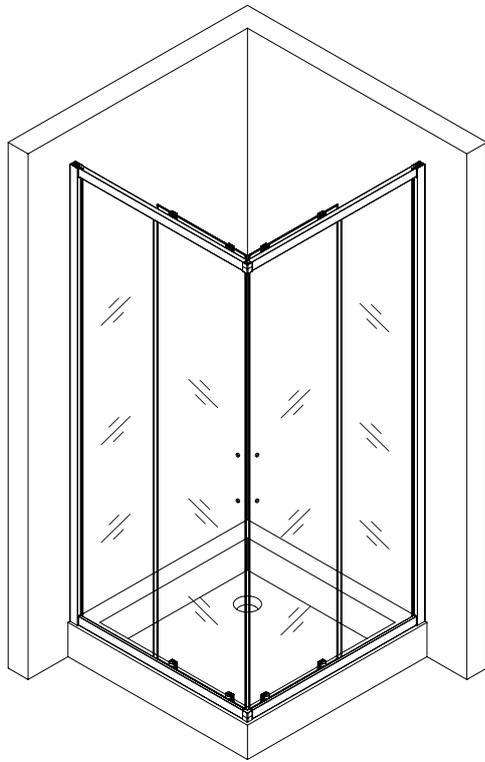



Шаг 11

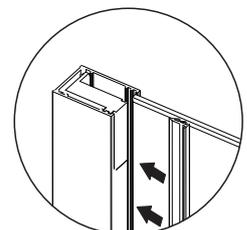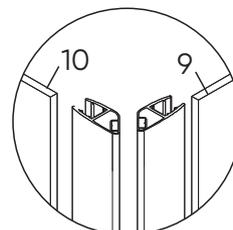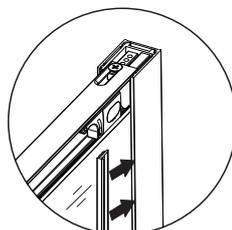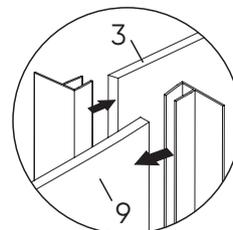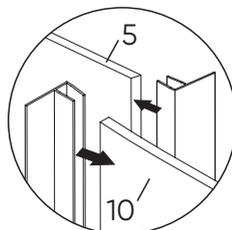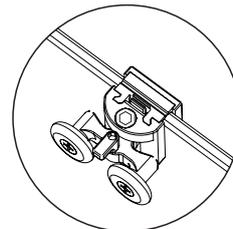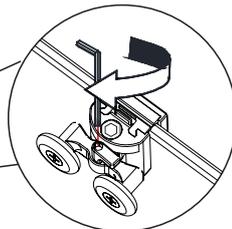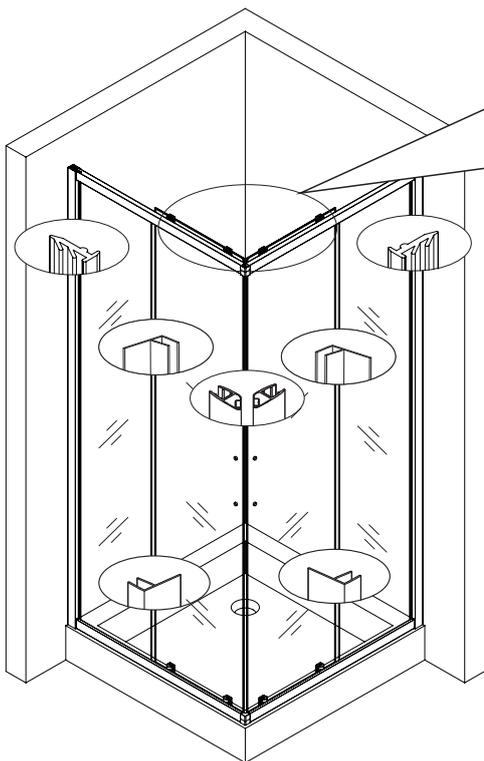

Шаг 12

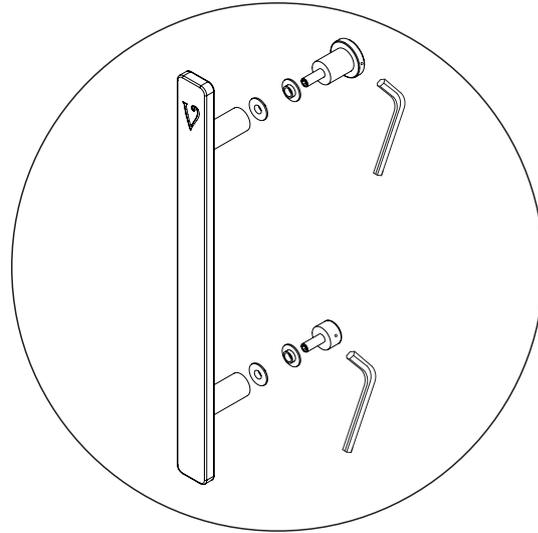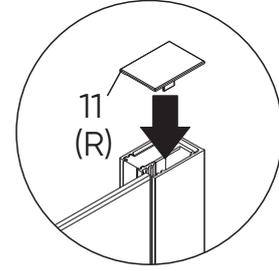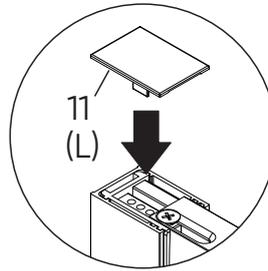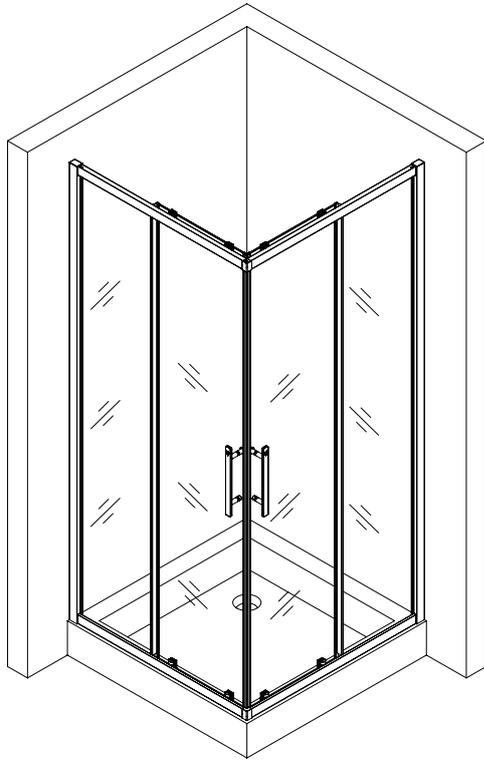


Шаг 13

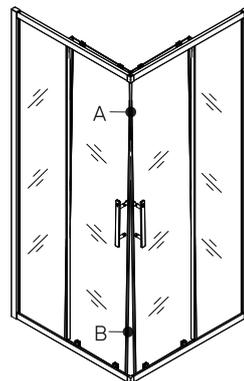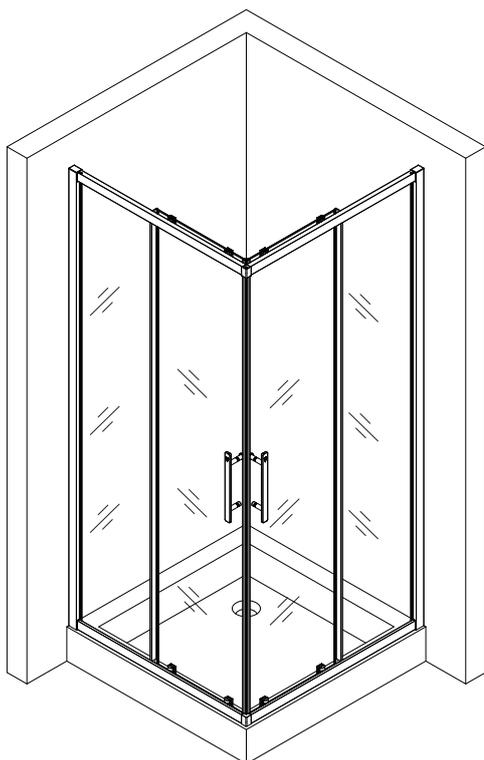

A ≠ B

НЕТ!

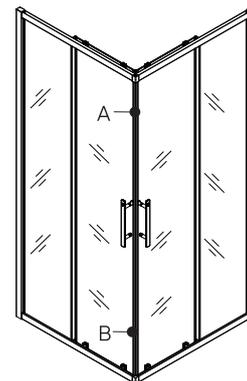

A = B

ДА!



Шаг 14

! Силиконовый клей наносим только с внешней стороны

Примечание: не используйте душевую в течение 24 часов после нанесения силиконового клея

